

# Perseus Signed Drivers Installation for Microsoft Windows Operating Systems

Microtelecom Srl, Italy

March, 31, 2016

## Introduction

This document explains how to install the Perseus Receivers drivers on Microsoft Operating Systems.

The drivers supplied in this distribution are signed and support the following operating systems:

- Windows Vista
- Windows 7
- Windows 8
- Windows 8.1
- Windows 10

Both the 32 bit and the 64 bit version of the drivers are provided.

The drivers for the 32 bit version operating systems are in the folder x86.

The drivers for the 64 bit version operating systems are in the folder x64.


Windows XP is not supported by this distribution.

## Driver Installation


### Step 1: Uninstall existing drivers

This step is required if a previous version of the Perseus drivers are already installed on the target system.

- Connect the Perseus Receiver to your system, open the device manager, open the tab “USB Devices”, right click the “Perseus receiver” icon and select “Uninstall”

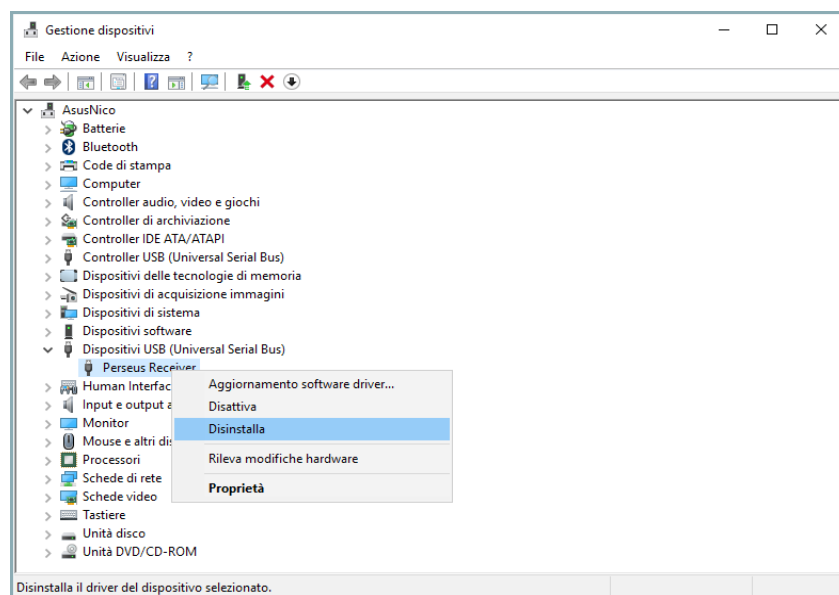


- In the Device Uninstall dialog check the box “Remove the software driver for the device” and click OK


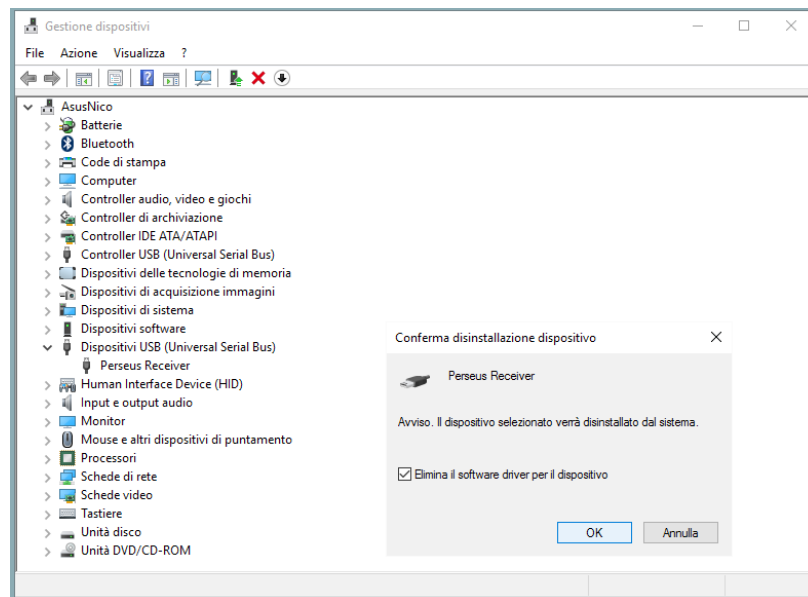


- Unplug the receiver from the PC
- Reboot the operating system
- Plug your receiver to the PC and open the device manager

The Perseus receiver should appear under the “Other devices” tab labeled as an “unknown device” as indicated in the picture.

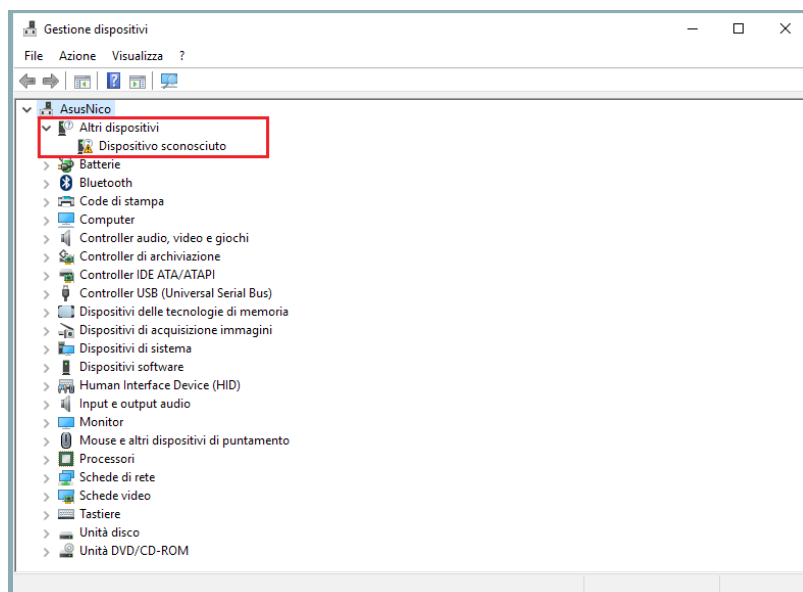


- Right click the icon and select Properties. Click the tab Details and verify that the unknown device VID/PID reported by the device manager match the Perseus identifiers VID\_04B4 and PID\_325C as indicated in the following picture

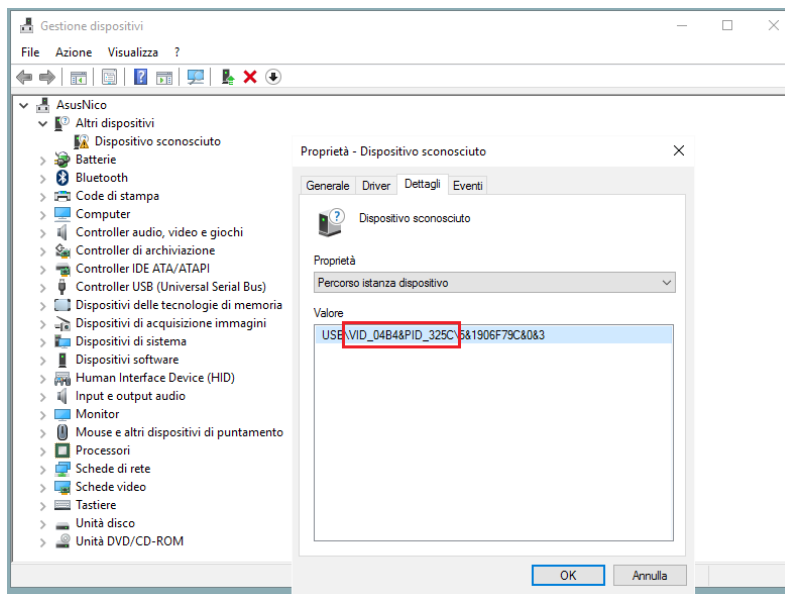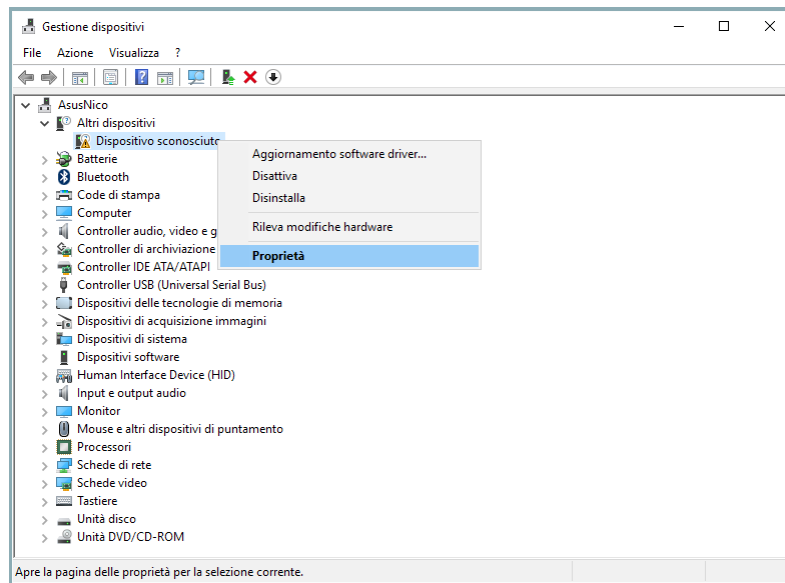


- Click OK to close the Properties/Details dialog.

## Step 2: Install new signed drivers

- Right click the “unknown device” icon and select “Update Driver Software”

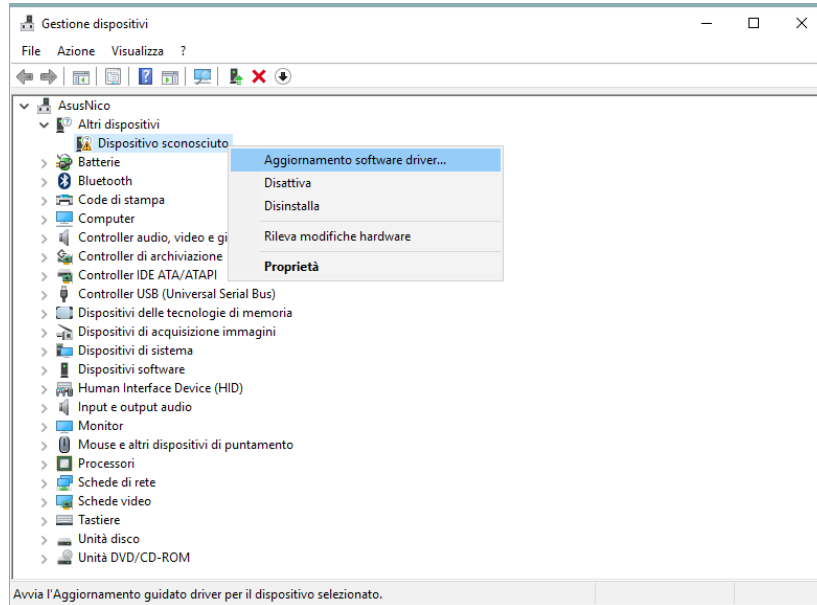


- Click “Search the driver software in this computer”

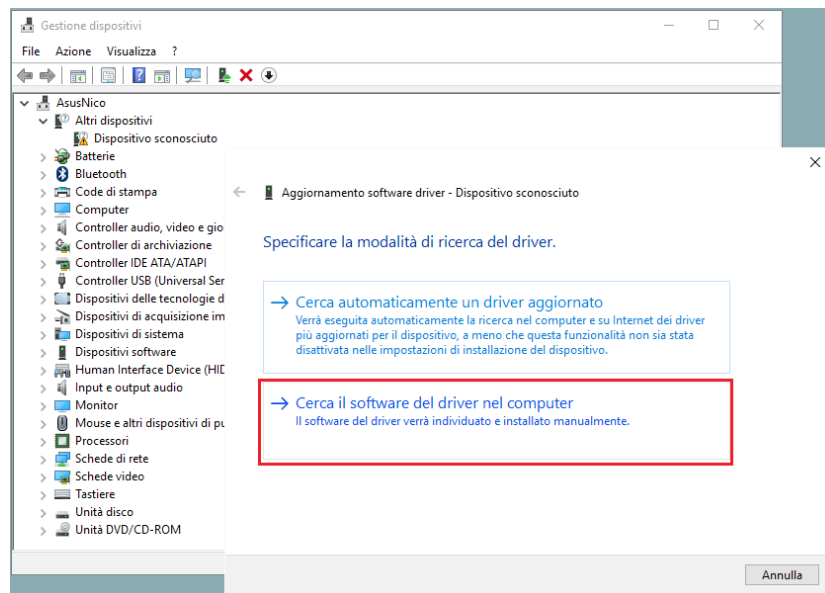


- In the “Update Driver Software” click “Browse” and locate the folder where the Perseus drivers have been copied (in this example they have been saved in Desktop/signedperseusdrivers).

For the 64 bit version Operating Systems select the folder x64. For the 32 bit version Operating Systems select the folder x86.  
Then click OK.

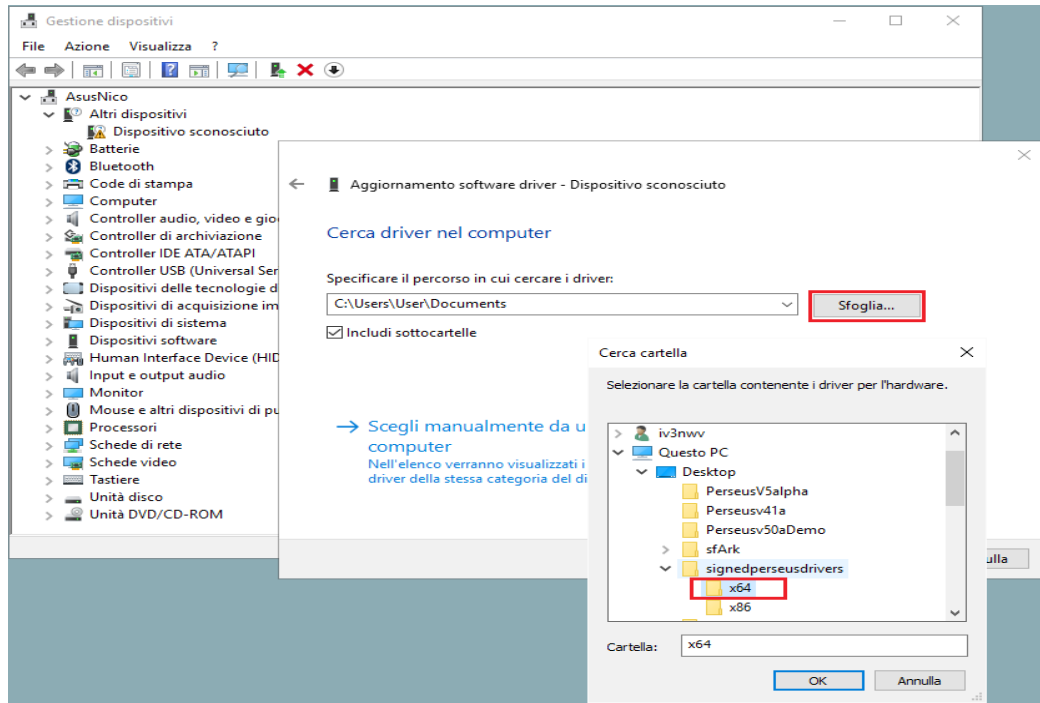


In this example we have chosen the x64 folder as the installation is for Windows10/64bit

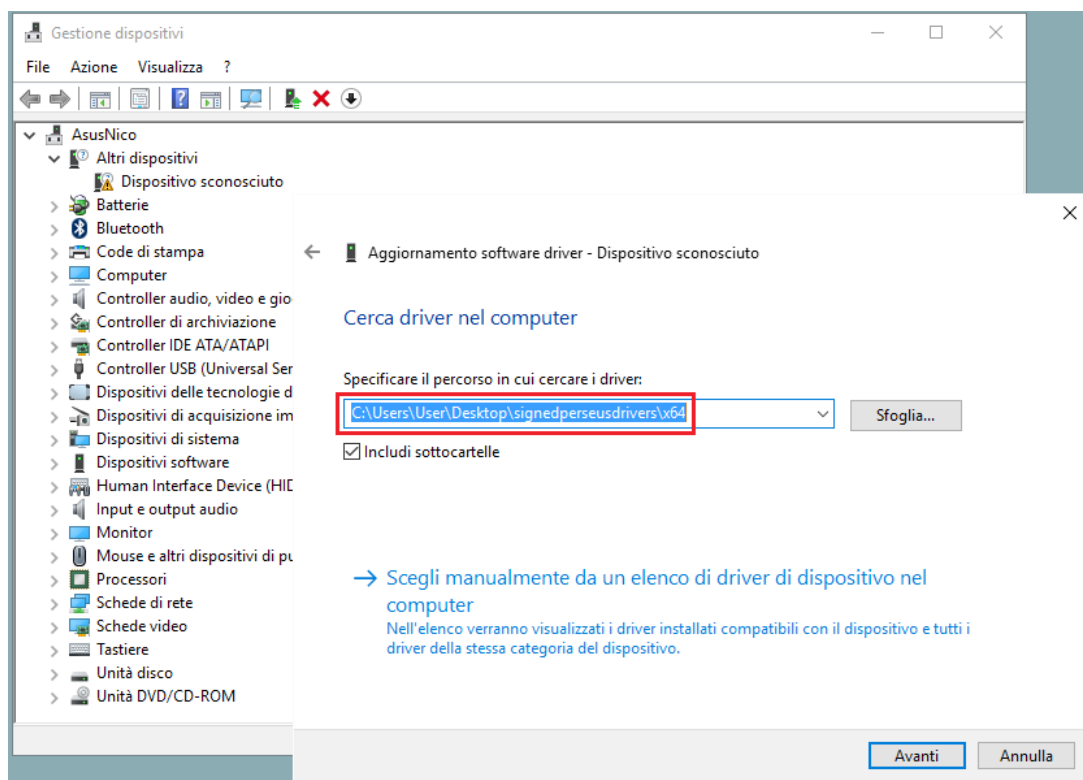

- Click Next

The operating system prompts a security warning informing that a software is being installed in the system.

- Click Install

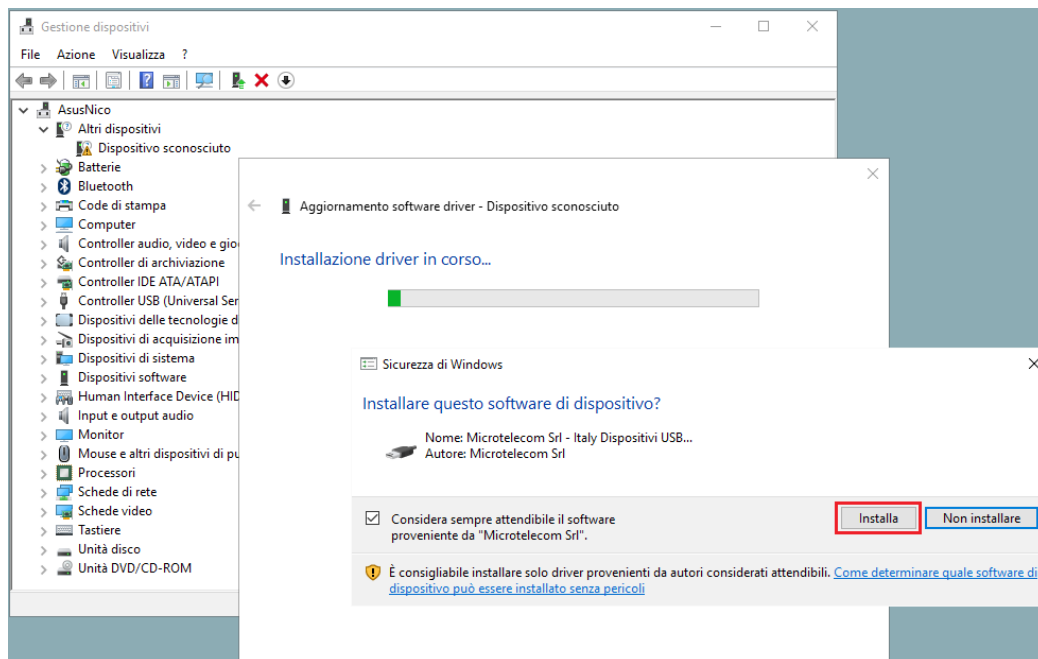

The operating system informs that the drivers has been successfully installed.

- Click “close” to complete the drivers installation procedure.

