

Mounting instruction

ECOFLEX® 10, AIRCOM PREMIUM UHF-Connector / Art. Nr.: 7377-A



Required tools :


- 1 x cutter knife
- 1 x Scissors
- 1 x Soldering station



Cut off cable tail right-angled.
Remove 26 mm of the outer sheath
with a knife.



Shorten the copper braid to 10 mm.

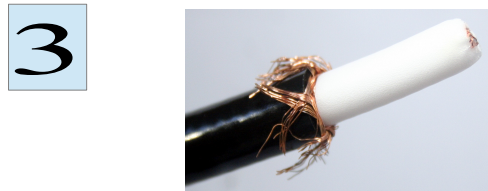

Bend copper braid backwards,
Scarify and remove copper foil with a
knife.



Remove 16 mm from the dielectric



Move connector sleeve over the
cable. Screw housing onto the cable.



Solder the inner conductor carefully
through the front hole



Crew connector sleeve over the
housing.