

Mounting instruction

AIRCELL® 7, ECOFLEX® 7 UHF-Connector / Art. Nr.: 7394-A




Required tools :

- 1 x cutter knife
- 1 x Scissors
- 1 x soldering station
- 1 x open-ended spanner 12 mm
- 1 x open-ended spanner 13 mm



1 Cut off cable tail right-angled.

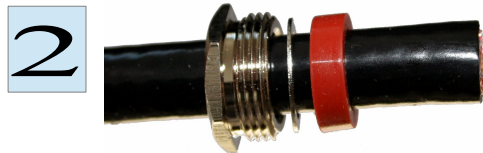


2 Move the nut, clamping ring and rubber washer over the cable tail.



3 Remove 21 mm of the outer jacket with a knife. Then slide the spacer ring onto the copper mesh.



4 Bend up the copper mesh at a right angle. Insert the contact sleeve between the copper foil and the braid as far as it will go. Cut off the protruding braid. Push the rubber seal forward up to the contact sleeve.

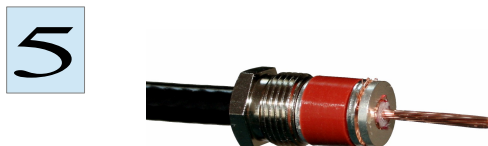

5 Use a knife to remove the copper foil and dielectric..



6 Push the pin with the insulator onto the inner conductor until it touches and solder it carefully.



7 Push the connector sleeve into the connector housing. Hand-tighten the clamping nut with two open-end wrenches 12 mm and 13 mm. A small gap between nut and connector housing should still be visible!