

Mounting instruction




AIRCELL®5

BNC-Connector, srewable / item. No.: 7720



Cut off cable tail right-angled.

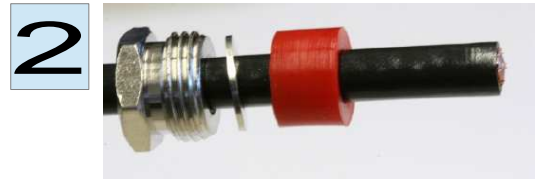

Move the nut, clamping ring and rubber washer over the cable head.



Remove 7 mm of the outer sheathing with a knife.



Bend copper braid upwards right angled.



Move the contact jacket as far as it will go between the copper braid and the foil. Cut off the copper braid with a side cutter. Remove 6 mm of the copper foil, then remove 5 mm of the dielectric with a side cutter.



Cut off the copper braid with a side cutter and move the rubber washer upfront to the contact jacket, so the rest of the copper braid is clamped between the rubber washer and the contact jacket.



Put the head pin onto the inner conductor and solder it. There should be a space of 1 mm between the inner pin and the copper foil.



Insert the prepared cable head into the connector housing as far as it will go. Tighten the clamping nut with two jaw-wrenches of 11 mm hand tight.