

Mounting instruction



AIRCELL®5


UHF-Connector, crimp / item. No.: 7762



1
Cut off cable tail right-angled. Move the crimp-cover over the cable head. Cut off 27 mm of the outer sheath with a knife.



2
Bend copper braid backwards. Slit slightly 22 mm of the copper foil and remove it. Then remove 5 mm of the dielectric.

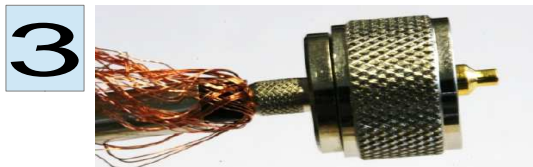

3
Insert the prepared cable head into the connector housing as far as it will go.



4
Solder the inner conductor and the inner pin at the tip.



5
Cut off the copper braid with a side cutter and move the crimp jacket to the front.



6
Crimp the crimp jacket with a crimp tool; herewith the copper braid will be trapped between the crimp jacket and the connector housing.