

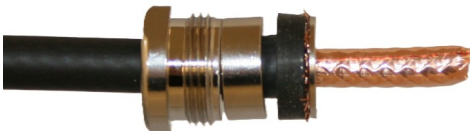
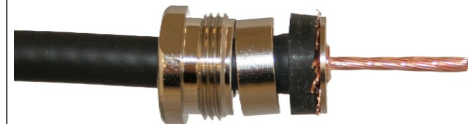
Mounting instruction



Aircell[®] 7, Ecoflex[®] 7

UHF plug / Item no.: 7394

www.ssb-electronic.com

Required tools: 1 x cutter knife 1 x scissors 2 x open-ended spanner 16 mm 1 x soldering station 1 x solder		1	
			Cut off cable tail right-angled.
2		3	
Move the nut, clamping ring and rubber washer over the cable tail.			Remove 20 mm of the outer jacket with the cutter knife.
4		5	
Bend copper braid upwards right-angled. Insert contact sleeve between copper foil and braid until stop. Cut off protruding braid. Move the rubber seal to the front, up to the contact sleeve.			Mark out and remove the copper foil and the white dielectric foam with a cutter knife.
6		7	
The prepared cable tail has to be inserted into the housing until stop. Tighten the clamping nut finger tight with two open-ended spanners 16 mm. A gap of 0,5 to 1,0 mm must still be visible between the nut and the connector housing!			Then carefully solder the inner conductor to the pin tip.