

Mounting instruction

ECOFLEX® 5

UHF-Connector female, crimp / Item. No.: 7763-E



Required tools:


- 1 x Cutter knife
- 1 x Wire cutter
- 1 x Crimp insert 0.255" (6,47 mm)



Cut off cable tail right-angled.



Cut off 10 mm of the outer sheathing with a knife. Bend copper braid upwards right-angled.

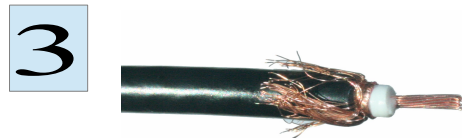

Slit slightly a length of 9 mm of the copper foil and remove it. Then remove 8 mm of the dielectric.



Then cut off 4 mm from the inner conductor. Put the head pin onto the inner conductor and solder it.



Insert the prepared cable end into the connector housing as far as it will go (Click).



Crimp the crimp jacket with a crimp tool Hex .255"; herewith the copper braid will be trapped between the crimp jacket and the connector housing